


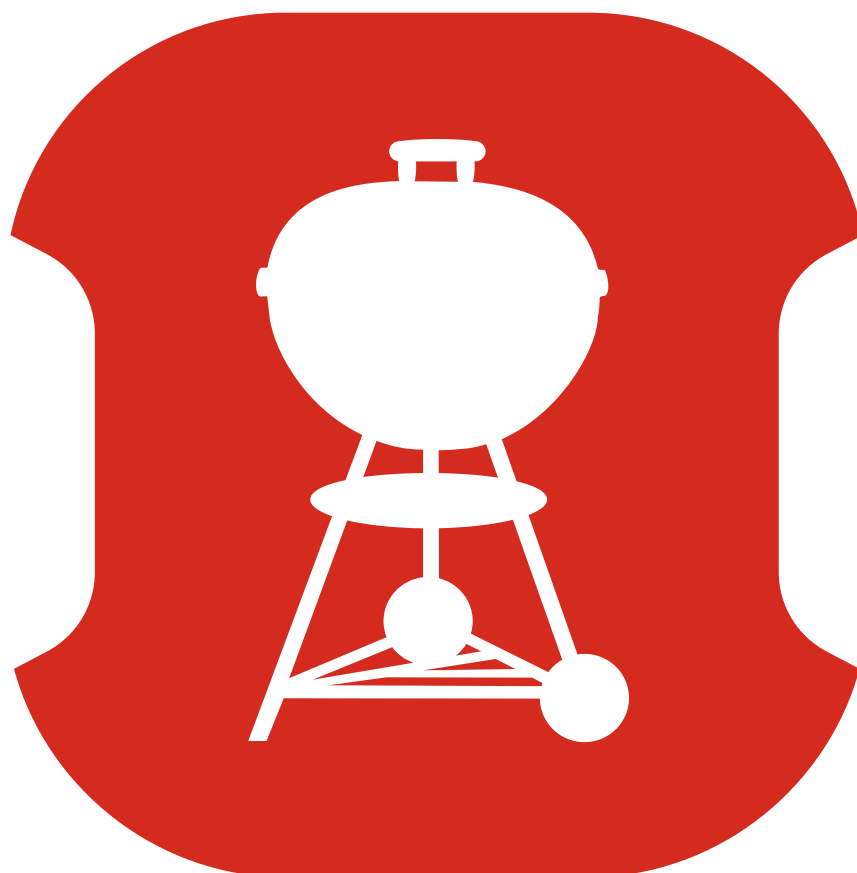

Welcome to


Kitchen
Thermometer

QUICK START GUIDE



Download the Weber[®]
iGrill[®] App



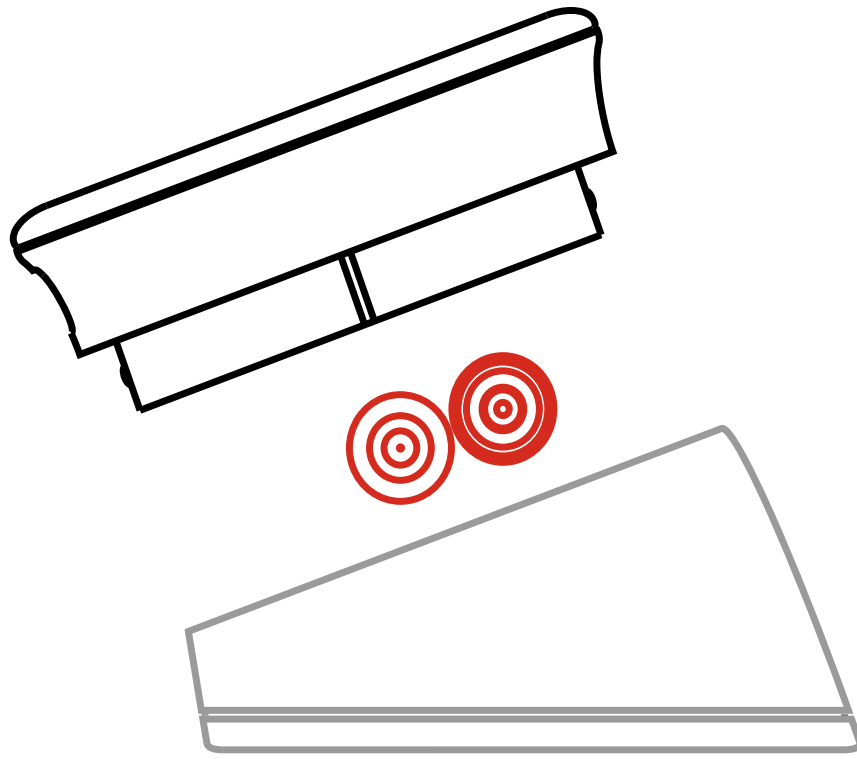


Remove top unit from
base, insert batteries

2



Press and release the
power button

3

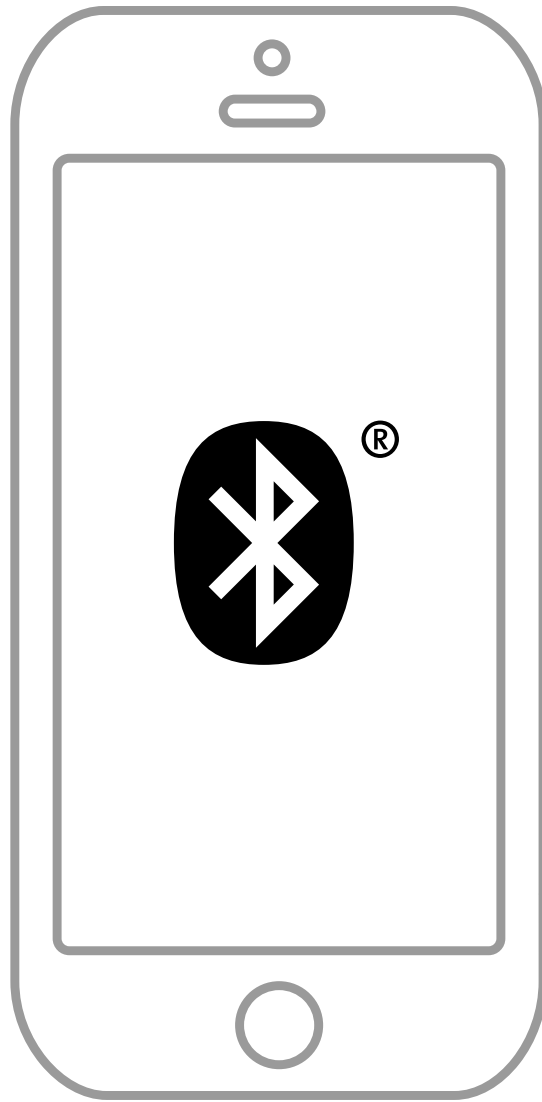


Launch app and connect
through Bluetooth[®]

4


Getting To Know Your

Kitchen
Thermometer

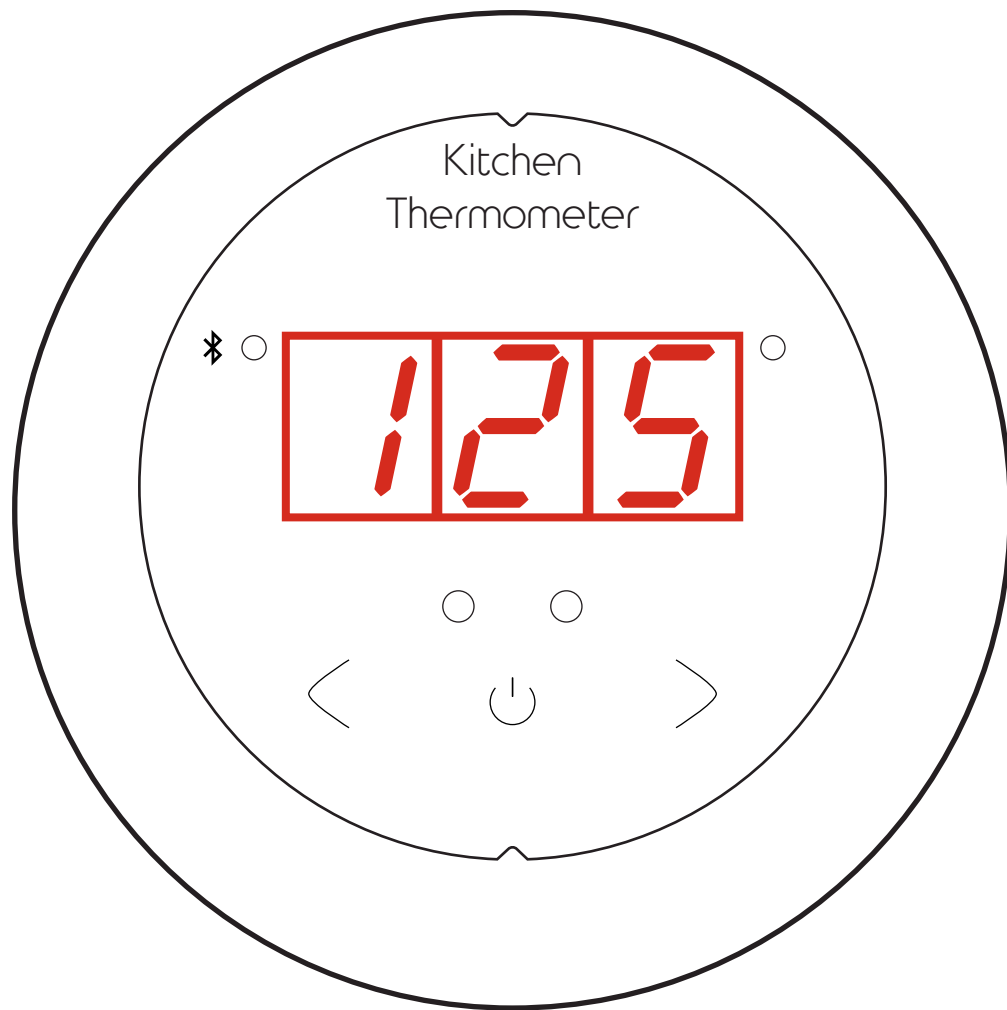



Smart Display

The display will illuminate once your smartphone/tablet is within range

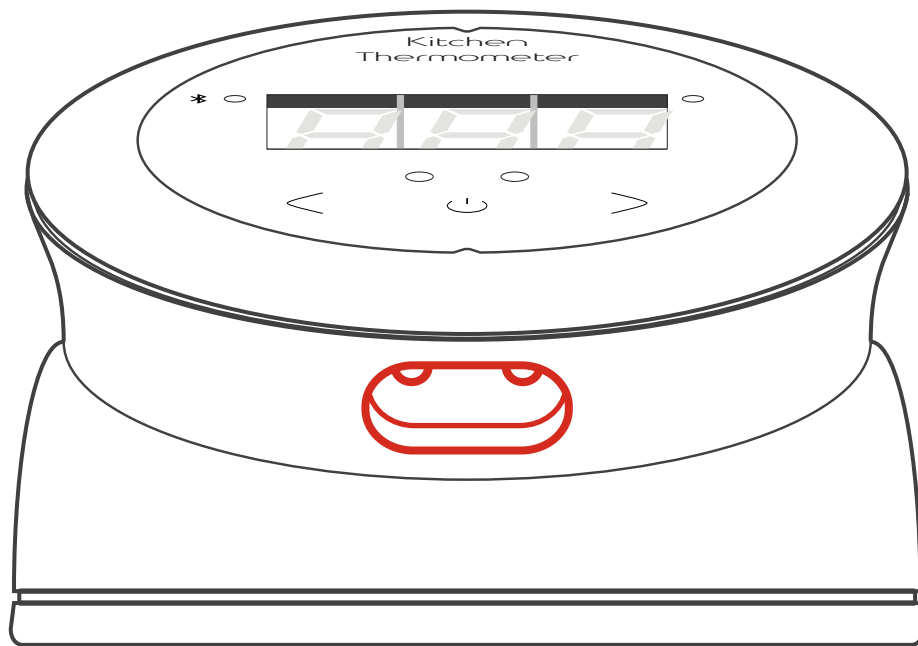



Probe Insert

2 probe inserts to monitor 2 temperatures at once

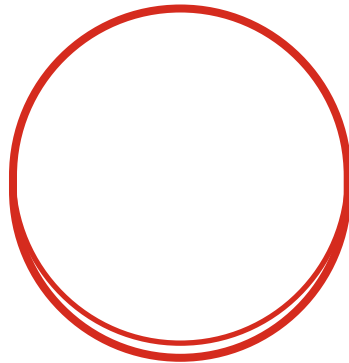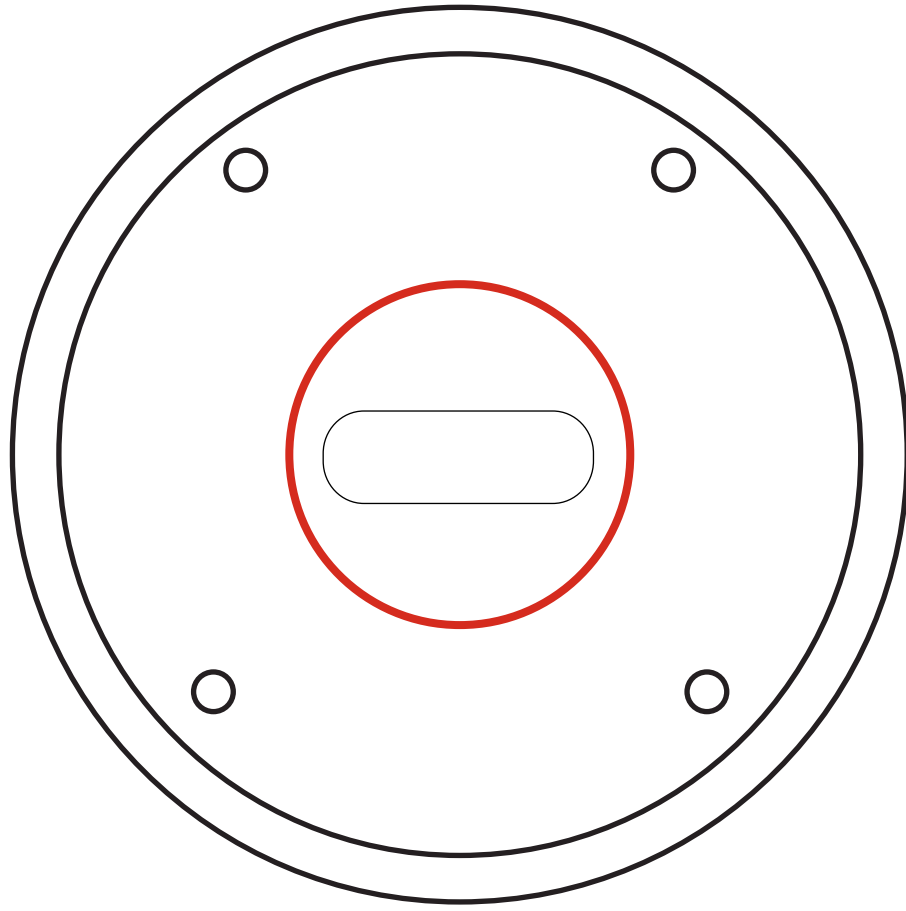



Magnetized Mounting

Place almost anywhere with built-in magnet or optional magnetic disc

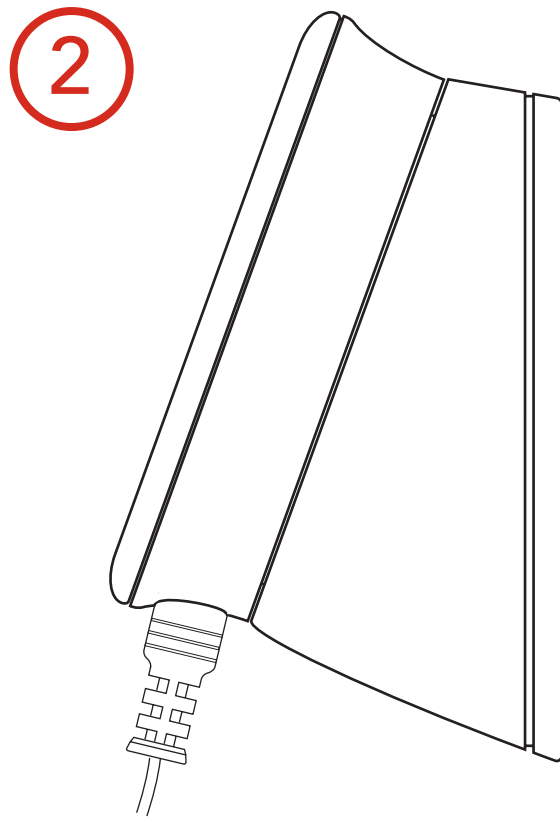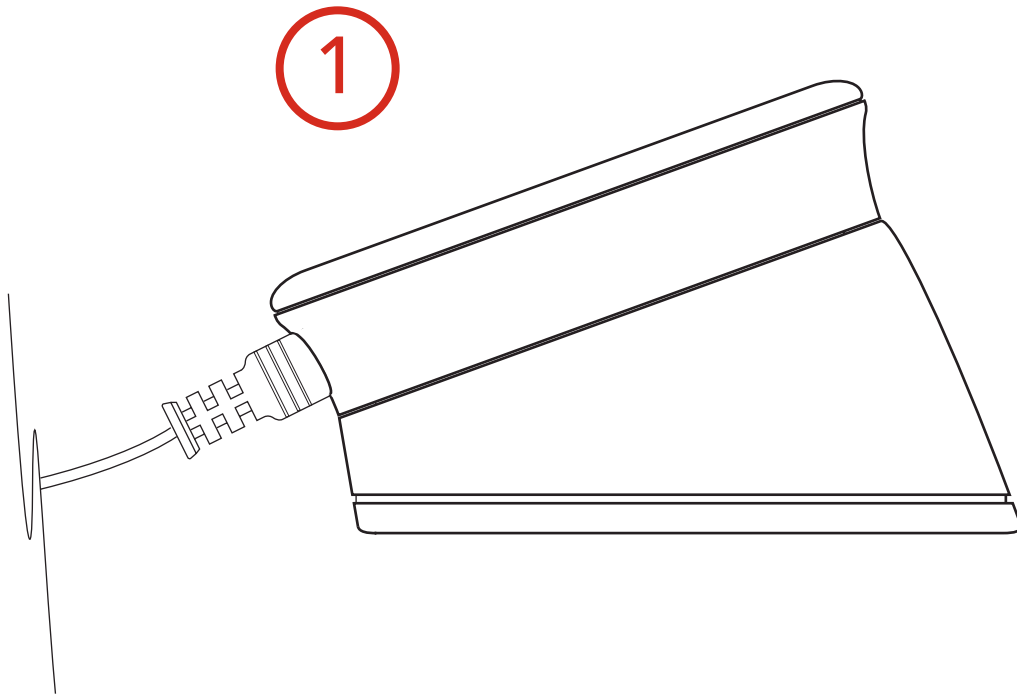


2 Viewing Angles

Choose from two viewing positions by rotating the main unit 180 degrees

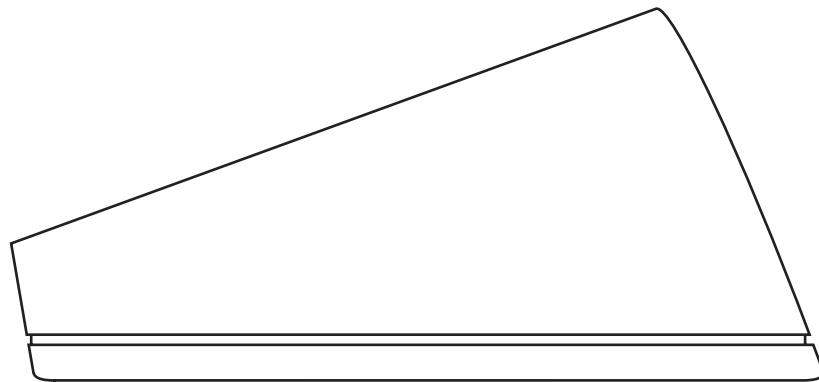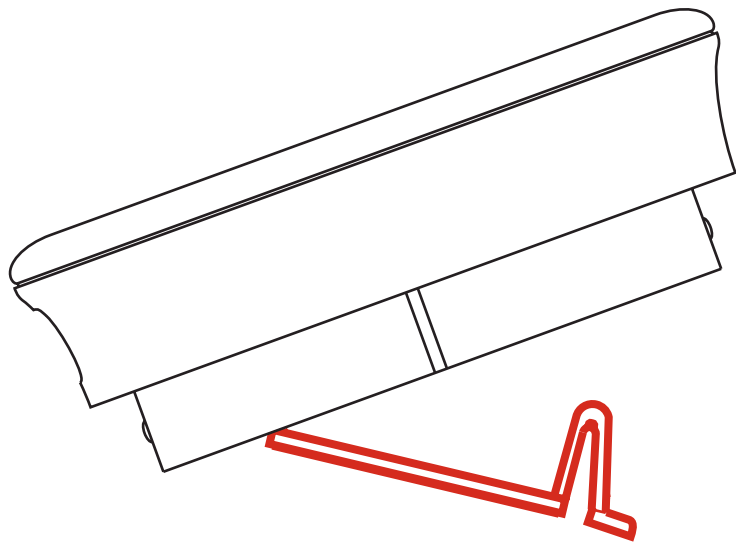


Battery Cover

Remove to insert batteries

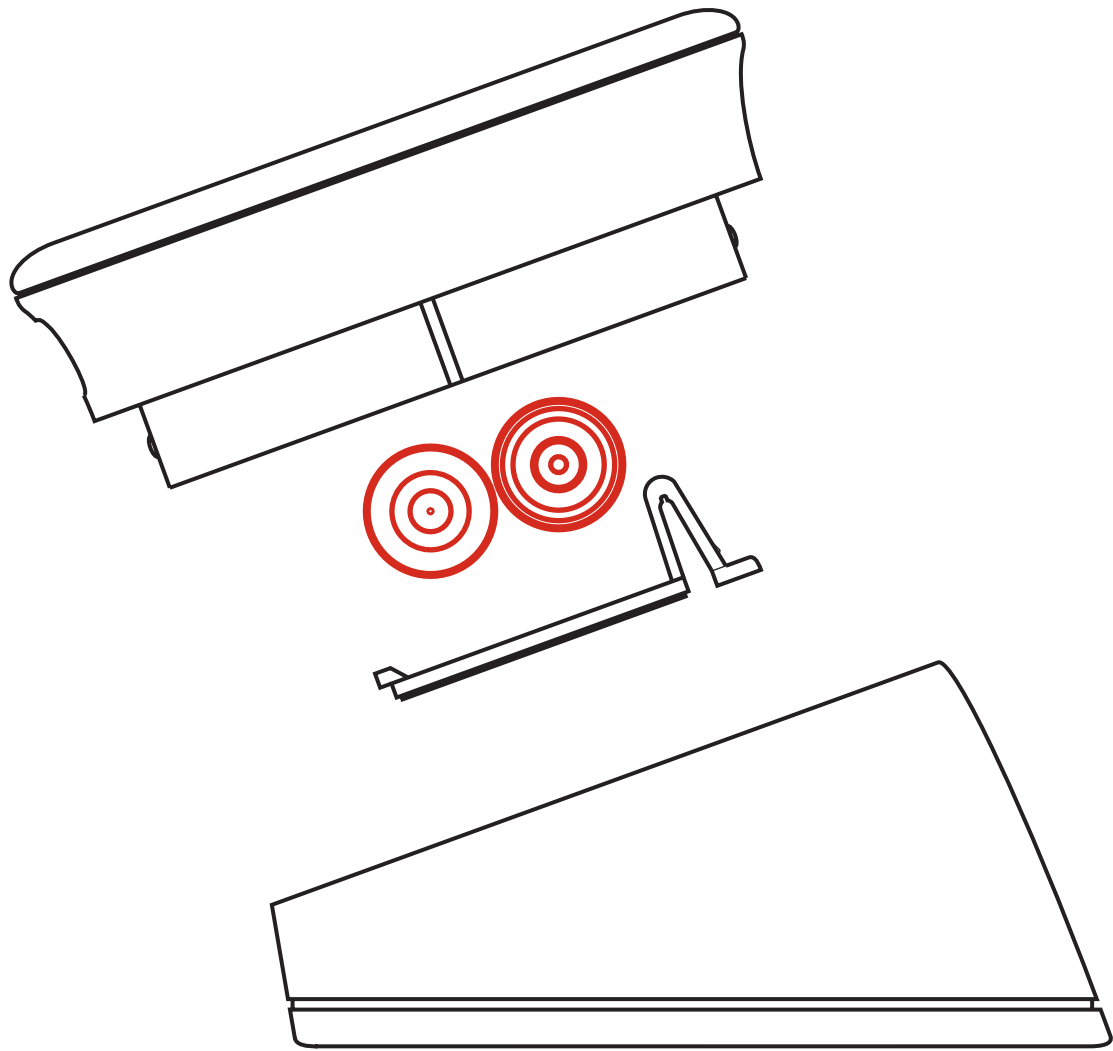


Battery

Requires 2 AA batteries (included)

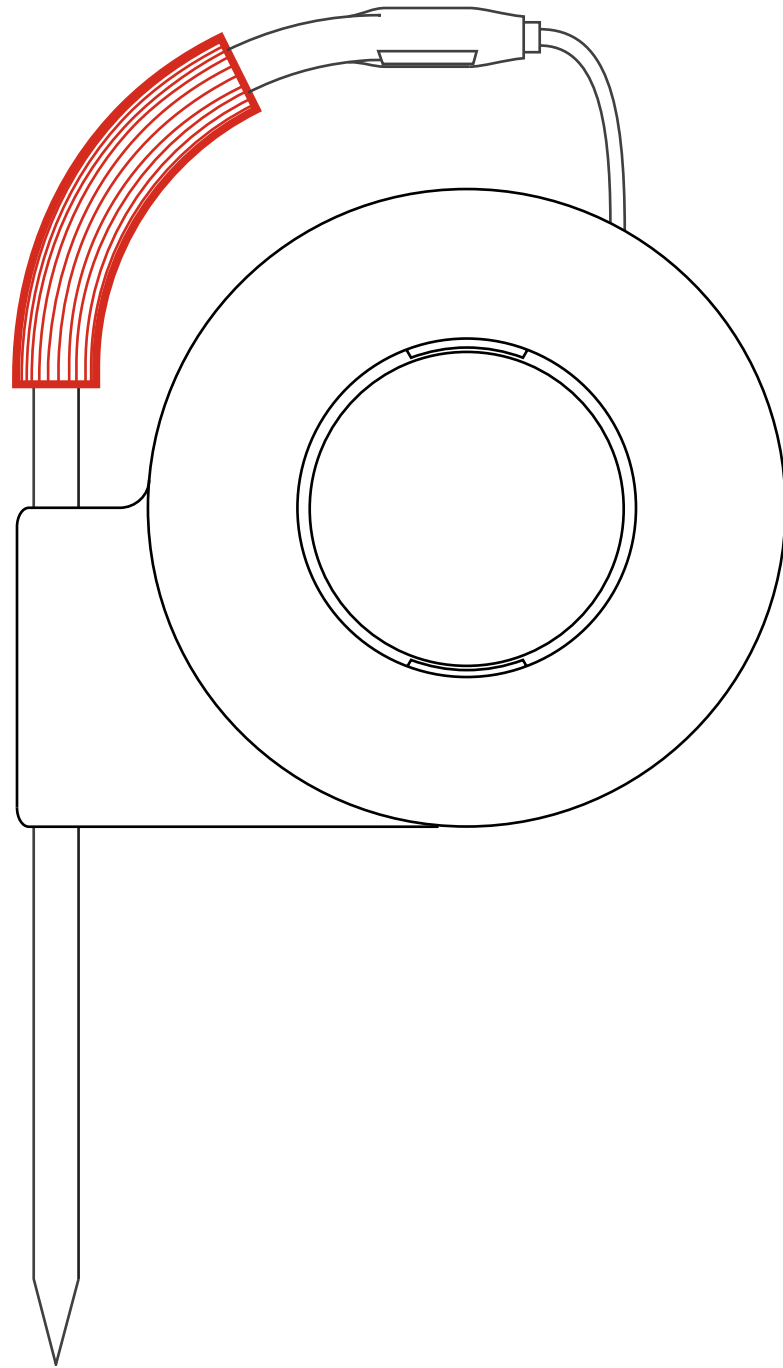

Coloured Probe Indicator

Easily identify each probe reading within the app

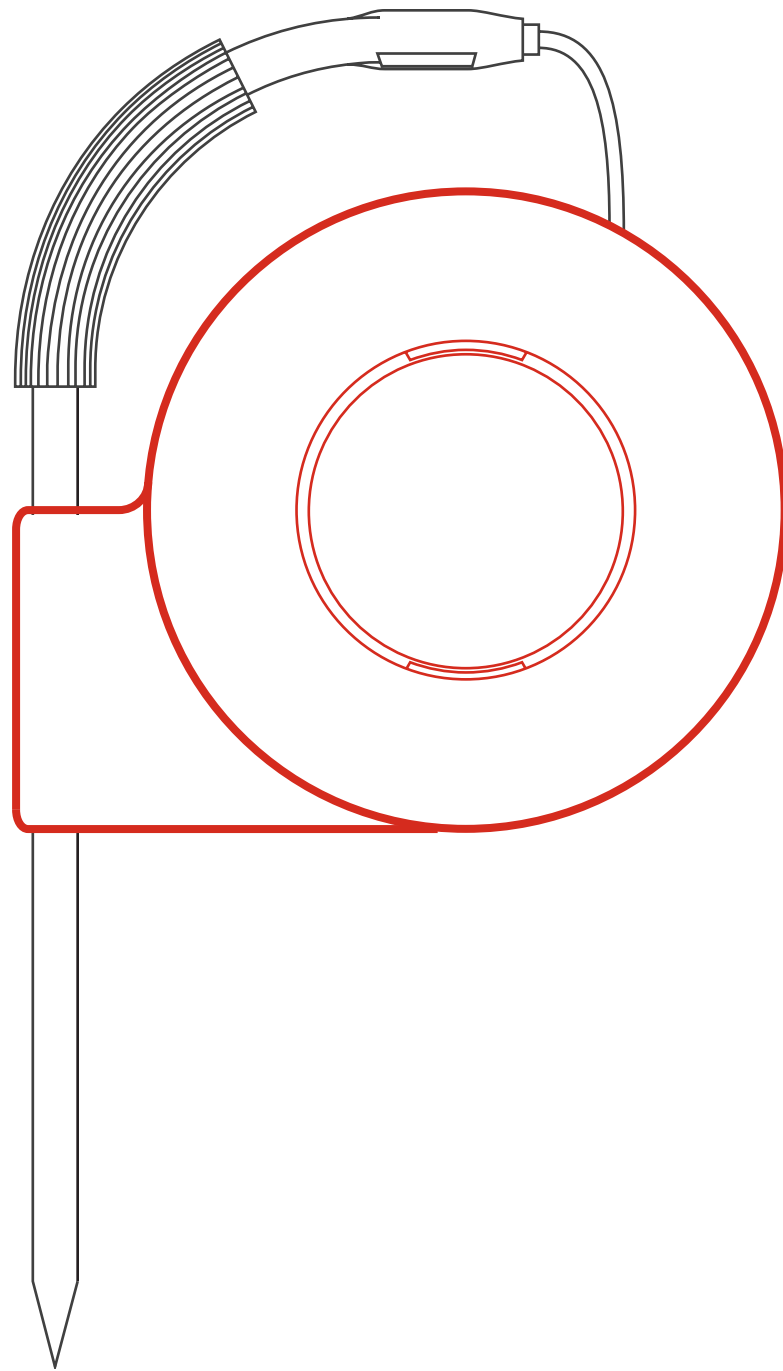

Probe Wrap

Neatly wrap and store your probes on the back of your unit when it's not in use

WARNING

Coloured probe indicators not intended to be used as heat safety grips. Probes are NOT dishwasher safe.



NOTE: The magnetic base is not designed to withstand high heat and it must be placed on a cool surface. If the surface is too hot to touch, it's too hot for the Weber® iGrill® base!

Supported Devices: App requires a Bluetooth® Smart Ready device. Check support.weber.com/igrill-support for a list of compatible devices.

Operation Is Subject To The Following Two Conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of this device.

App Store is a service mark of Apple Inc. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG Inc.



59291_092816