


Welcome to Kitchen Thermometer

QUICK START GUIDE

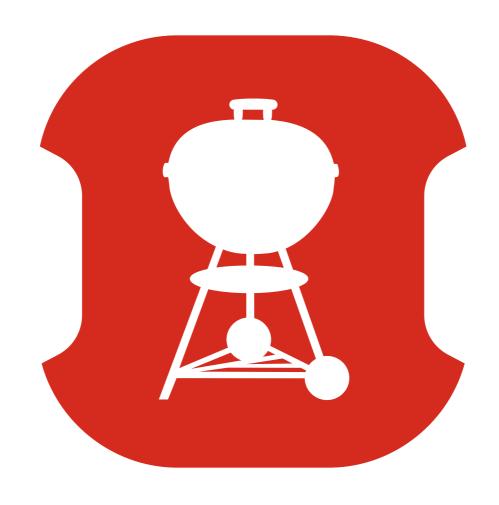


Download the Weber® iGrill® App






Remove top unit from base, pull tab

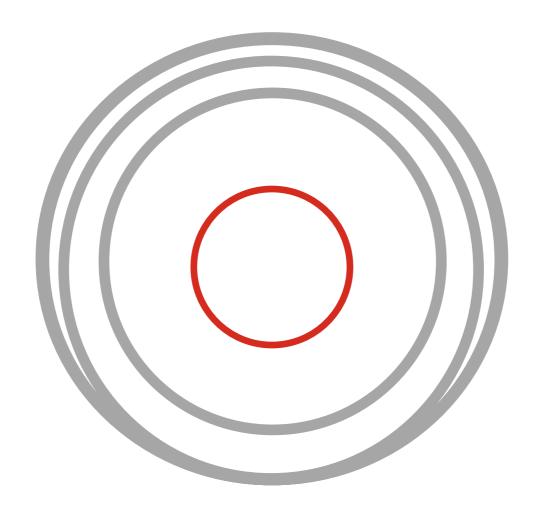

Press and release the power button




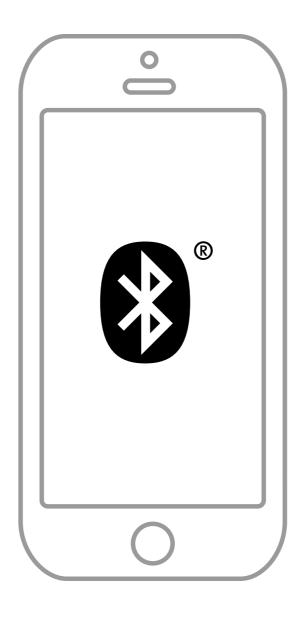

Launch app and connect through Bluetooth®



GettingToKnowYour Kitchen Thermometer,

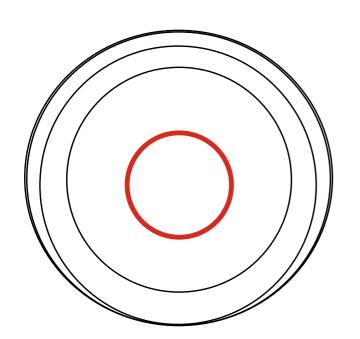


Connection




Flashing: Ready to pair Solid for 5 seconds: Paired

Peak Preset

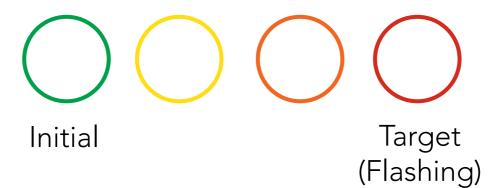


Range Preset

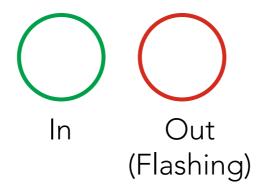


Smart LED

Indicates when paired, temperature progression and temperature out of range

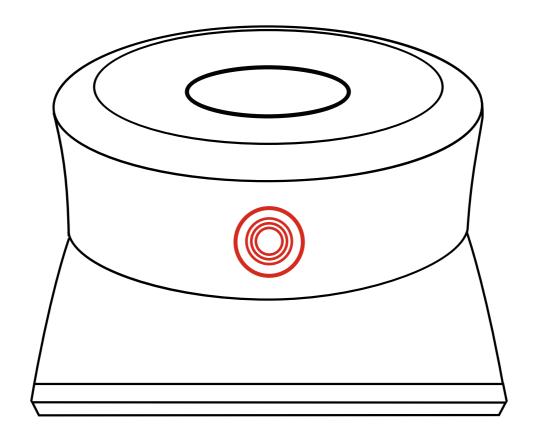


Probe Insert

Single probe insert for meat probe or ambient temperature probe

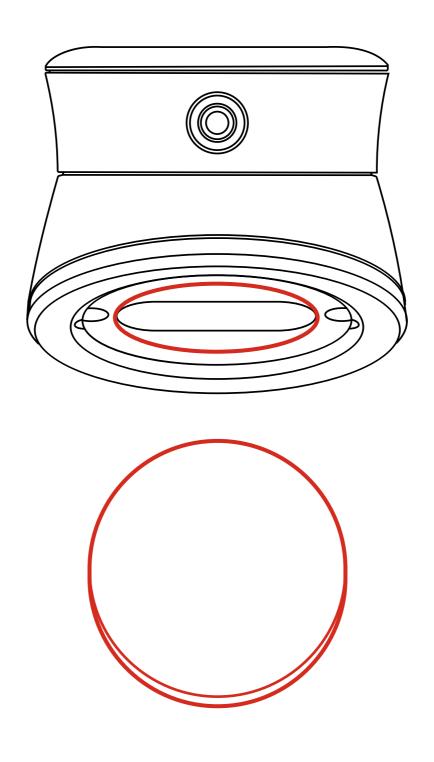


Magnetized Mounting

Place almost anywhere with built-in magnet or optional magnetic disc

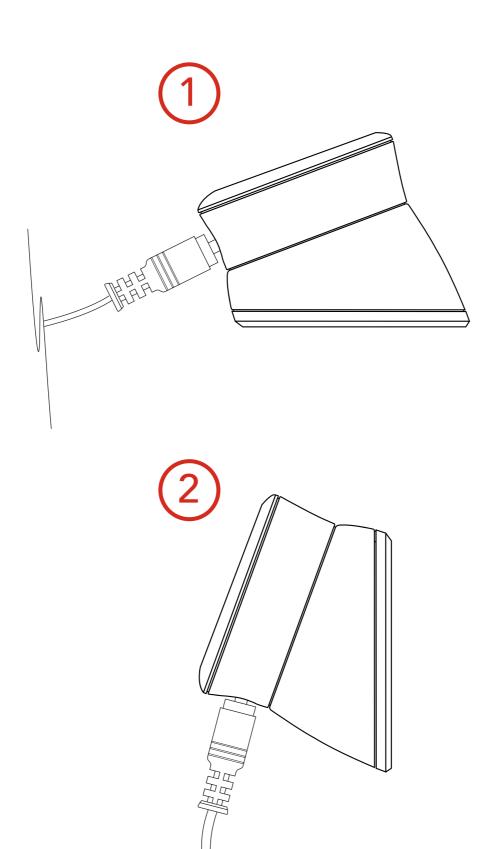


2 Viewing Angles

Choose from two viewing positions by rotating the main unit 180 degrees

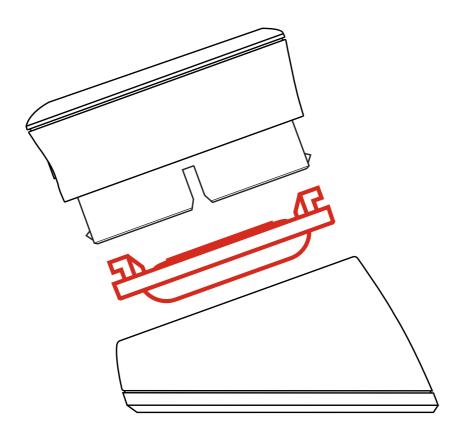


Battery Cover Twist to remove

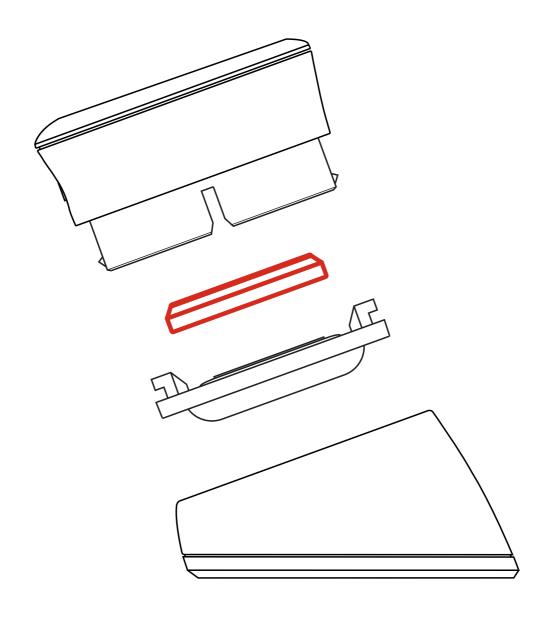


Battery

Replaceable CR2032 coin cell battery (included)

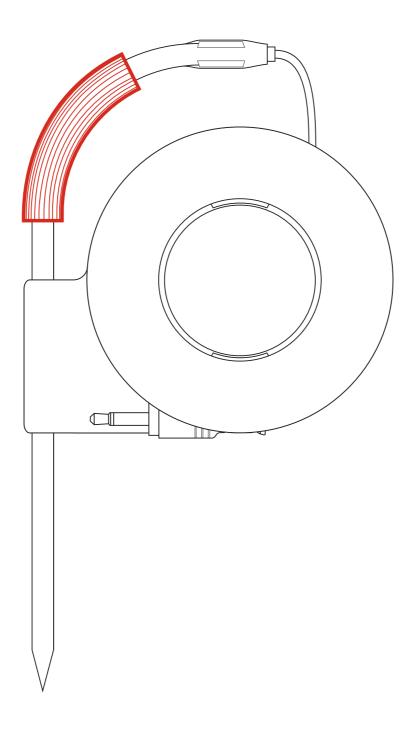

Coloured Probe Indicator

Easily identify each probe reading within the app

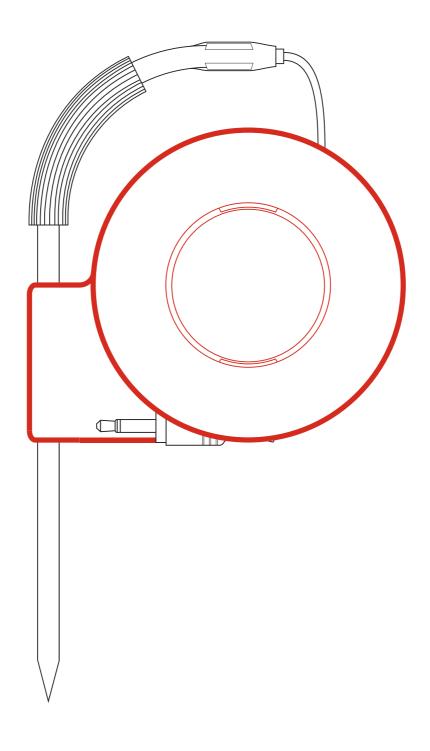

Probe Wrap

Neatly wrap and store your probes on the back of your unit when it's not in use

WARNING

Coloured probe indicators not intended to be used as heat safety grips. Probes are NOT dishwasher safe.



NOTE: The magnetic base is not designed to withstand high heat and it must be placed on a cool surface. If the surface is too hot to touch, it's too hot for the Weber® iGrill® base!

Supported Devices: App requires a Bluetooth® Smart Ready device. Check support.weber.com/igrill-support for a list of compatible devices.

Operation Is Subject To The Following Two Conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of this device.

App Store is a service mark of Apple Inc. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG Inc.











